

BlitzChiller

Model HC03
Instruction Manual



PLEASE READ ALL INSTRUCTIONS BEFORE USING YOUR BLITZ CHILLER

Important Safeguards

1. Before using any electrical appliance, basic safety precautions should be followed to prevent or reduce the risk of electric shock, fire, and/or injury.
2. Do not let children use the Blitz Chiller without adult supervision. Store your Blitz Chiller out of reach of children.
3. To prevent electric shock, do not immerse the cord, plug, or Blitz Chiller in water or other liquids.
4. Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage and only use with the provided wall plug. **DO NOT USE** another manufacturer's plug as this may damage the unit and cause your unit to malfunction which may lead to bodily harm. This will also void the unit's warranty.
5. Unplug your Blitz Chiller when not in use, before cleaning, adding water or ice, or emptying water.
6. Do not use your Blitz Chiller if the electrical cord or plug is damaged, after the unit malfunctions, or is dropped or damaged in any manner.
7. Only use the Blitz Chiller with the power supply that originally came with your unit. Use of any other type of plug may cause damage to your unit. Contact us Monday – Friday toll-free 877-226-6537 10am-5:30pm Eastern time or at info@blitzchiller.com if you lose or damage you plug and need to obtain another one.
8. Contact our Customer Care at info@blitzchiller.com for repairs or servicing or call us Monday - Friday toll-free 877-226-6537 10am-5:30pm Eastern time.
9. To reduce the risk of fire or electric shock, do not attempt to disassemble your Blitz Chiller as it does not contain any user-serviceable parts.
10. To reduce the risk of injury, do not let the cord hang over the edge of a table or counter or touch hot surfaces.
11. Operate your Blitz Chiller on a clean, dry, and level surface.
12. Keep your Blitz Chiller away from any hot appliances or surfaces.
13. Do not attempt to move your Blitz Chiller while it is in operation or still plugged in. To move your Blitz Chiller safely, unplug the unit, make sure the unit does not contain a beverage and that all ice and water has been poured out of the unit. Only then can you safely move your Blitz Chiller.
14. To prevent injury, avoid contact with all moving parts and do not open the lid cover while the unit is in operation. Keep hands, hair, clothing, or any item that may become entangled away from the rotating drive roller.
15. Only use your Blitz Chiller for its intended purpose. When not in use, unplug your Blitz Chiller, pour out the ice/water bath, and allow to air dry.
16. Do not clean your Blitz Chiller with scouring powders or pads that may damage the unit's surface. Use only mild soap and water and allow to air dry.
17. Your Blitz Chiller is designed for household use only. Any servicing other than cleaning and user maintenance should be done only by authorized Revolutionary Cooling Systems (RCS) personnel.
18. Keep the lid closed when in use.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Description Of Parts



Introduction

Congratulations, you are the proud owner of the Blitz Chiller, a rapid beverage chiller from Revolutionary Cooling Systems (RCS). The Blitz Chiller is fun, safe, and easy to use!

Great for emergency situations at social events, parties, when unexpected guests arrive, or prior to your meals, where you can quickly chill room temperature beverages to a cold drinking temperature.

The Blitz Chiller is a fast and convenient way to further chill refrigerated beverages that are still not cold enough—chill your drinks to "ice cold" temperature.

Thank you again for your purchase and be on the look out for other RCS products at www.RevCooling.com

How to Operate Your Blitz Chiller

Now that you are ready to use your Blitz Chiller, please follow these simple instructions to rapidly chill your beverages.

1. Place the unit on a clean, dry, level surface, insert the power adaptor into the rear of the unit and plug the adaptor into a suitable outlet. Press the lid latch to open the lid.
2. Add approximately one tray of ice cubes which is about 16 standard cubes into the ice-water bin. Make sure ice is not above the drive roller.
3. Pour 1.5 cups (355ml) of cold water into the ice-water bin. Make sure the the ice-water level is below the drive roller.
4. Place your drink container HORIZONTALLY onto the roller with the container neck or top facing to the LEFT.
5. Close the lid securely. NOTE: the unit has a safety feature where the lid must be closed in order to operate. If the lid is open, the unit will not operate.
6. Slide the TIMER LEVER to the right to your desired setting to start the Blitz Chiller.

Assuming your drink's starting temperature is 77°F/25°C the following chill times will be:

Can:

- 2 minutes to 38°F/3°C (Position I)
- 4 minutes to 33°F/1°C (Position II)



1. Add ice into the unit

Bottle:

- 4 minutes to 41°F/5°C (Position II)
- 6 minutes to 36°F/2°C (Position III)



2. Add 1.5 cups of water



3. Insert your drink onto the drive roller



4. Close the lid and set the timer lever

Please Note: Although the times are pre-set for your convenience, the cycle can be stopped at any time by sliding the Timer Lever all the way back to the left side to the OFF position or by pressing the lid latch to open the lid which will automatically stop the unit.

The Blitz Chiller is safe for carbonated drinks like beer and soda which will NOT explode or fizz over upon opening. Safe to open immediately.

7. After the unit has reached the time allotted, make sure the motion has stopped. Depress the lid latch and the spring-loaded lid will automatically come up—BE CAREFUL THAT YOUR HAND OR OTHER BODY PARTS ARE NOT BY OR ABOVE THE LID WHEN IT OPENS TO PREVENT INJURY.
8. Remove your beverage and enjoy.
9. Before chilling another beverage, you may need to add more ice. SEE ADDING MORE ICE & REMOVING WATER SECTION ON NEXT PAGE

Adding More Ice And Removing Water

Ice will need to be added as additional beverages are chilled. To add more ice, follow the steps below:

1. First, unplug the unit and have the lid open. Tilt the unit on its side to dispose of the excess water, BUT STILL HAVE ENOUGH WATER TO ALLOW THE PUMP TO FUNCTION.
2. Now add more ice making sure the ice water bath is not above the drive roller.
3. Continue chilling your beverages as before. If the pump is sputtering and water is not flowing smoothly from the water exit jet, just add more water until a smooth water flow is obtained.

Storage and Cleaning

When you are finished using your Blitz Chiller follow these steps:

1. Unplug and remove any beverages from the unit.
 2. Remove all water and ice from the unit. To remove the ice and water, first unplug the unit and carefully pour the water into your sink over the side of the unit. Rock the unit back and forth to remove water from the pump and pour out. Do not allow water to sit in the Blitz Chiller for extended periods of time.
 3. Allow the unit to air dry with the lid up.
 4. Store the unit in a safe place out of the reach of children.
- If the unit is dirty, clean with mild lukewarm soapy water and follow these cleaning steps

DO NOT USE ABRASIVE POWDERS OR SCOURING PADS SINCE THEY MAY SCRATCH THE SURFACE OF YOUR BLITZ CHILLER.

1. Plug in the unit and open the lid by pressing the lid latch. Add soapy water into the unit and slide the timer lever to the right to start the pump and let the soapy water circulate in the machine for a few minutes. Dispose of this soapy water by following the water removal instructions.
2. Rinse the unit with regular tap water and slide the TIMER lever to the right to start the pump and let the clean water circulate in the machine for a few minutes. Circulate the clean rinse water through the unit and follow the water removal instructions.
3. Unplug the unit and allow to air dry with the lid up.

Six Month Limited Warranty

We warrant to the original purchaser, that your Blitz Chiller will be free from defects in material or workmanship under normal household use for a period of six months from the date of purchase. Your Blitz Chiller has been manufactured under strict specifications and has been designed for use with only RCS approved accessories or replacement parts. These warranties expressly exclude any defects or damages resulting from unapproved accessories, or replacement parts or other repairs other than those that have been authorized by RCS. This warranty does not cover any damage or defect due to accident, misuse, shipment, improper service, unreasonable use, tamper, cosmetic damage, acts of God, accidental breakage, abuse, negligence, neglect, or misuse.

During the above six month warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (RCS' option) when the product is returned. The repaired or replacement product will be in warranty for the balance of the six month period and an additional one-month period. No charge will be made for such repair or replacement.

RCS grants you a six month warranty which gives you specific statutory rights. RCS will not be held liable for any special, incidental, or consequential damage, resulting from possession, use or loss of use of this product either directly or indirectly. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Returns Procedure

If your Blitz Chiller is under warranty and needs repairing, please contact RCS at info@blitzchiller.com, or call us toll-free 877-226-6537 Monday-Friday 10am-5:30pm Eastern time. Please retain your original receipt for proof of warranty.